

All routines use readop to read the options line.

The following options are available:

Do not access keyboard	K
Turn on error Logging	L<filename> <default is CFAST.LOG>
No header	N
Pause on last graphics frame	P
Reporting options	R
Reportg	Rnnn (wait nnn seconds between frames)
CFAST, Report, Reportss	R<list of options> (WINFSTPCO are available)
	W Wall surface temperature and target flux
	I Initial conditions
	N Normal printout
	F Vent flow
	S Layer and surface species concentration
	T tenability measure for each compartment
	P Temperature profile for materials
	C Compact output (default)
	O Original output format (will disappear eventually)
Program was called from a shell	F[:filename]
define ascii Output file	O<filename> (DEFAULT IS ASCII.HI)
“print” initslv data to	S[:filename] {SOLVE.INI}